

**MOOGER**

*Hustle Drive*  
Distortion Pedal

**Owner's Manual**

**Precautions**

**PLEASE READ CAREFULLY BEFORE PROCEEDING**

**Power Supply**

Please connect the designated AC adapter to an AC outlet of the correct voltage. Please be sure to use only an AC adapter which supplies 9V (±10%) DC, center minus. The maximum working voltage shall not exceed 12V, otherwise may be dangerous equipment damage, fire or other problems. Unplug the AC power adapter when not using or during electrical storms.

**Connections**

Always turn off the power of this and all other equipment before connecting or disconnecting, this will help prevent malfunction and / or damage to other devices. Also make sure to disconnect all connection cables and the power cord before moving this unit.

**Cleaning**

Clean only with a soft, dry cloth. If necessary, slightly moisten the cloth. Do not use abrasive cleanser, cleaning alcohol, paint thinners, wax, solvents, cleaning fluids, or chemical-impregnated wiping cloths.

**Interference with other electrical devices**

Radios and televisions placed nearby may experience reception interference. Operate this unit at a suitable distance from radios and televisions.

**Location**

To avoid deformation, discoloration, or other serious damage, do not expose this unit to the following conditions:

- Direct sunlight
- Magnetic fields
- Excessive dusty or dirty location
- Strong vibrations or shocks
- Heat sources
- Extreme temperature or humidity
- High humidity or moisture

**FCC certification**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

**Main Features**


- Ultrawide dynamic range and extraordinary open tube-like drive sound
- 2 Working Modes: HP/LP
- Full metal shell
- Very small and compact design
- True bypass switch
- DC 9V adapter power supply

**Effects Explanation**

**HP:** High peak mode, boost up the bottom-end, when increasing distortion by Drive knob, you will get more volume and a slight increase in high-mid range (around 3.5KHz).

**LP:** Low peak mode, color up extreme little to the original sound, very nice for clean boosting.

**Panel Instruction**

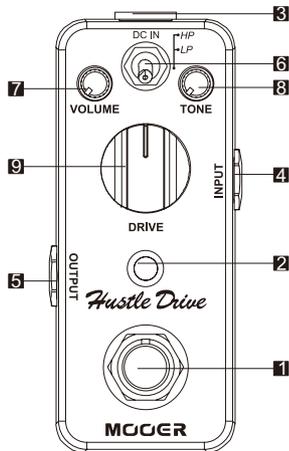

- 1. TRUE BYPASS Footswitch:**  
Push down the footswitch to toggle between on and bypass status.
- 2. ON/OFF LED:**  
Shows the on/off status of Hustle Drive, when the LED is lit the effect is engaged.
- 3. DC IN Power Jack:**  
For power supply, use a 9-volt DC regulated AC adapter (plug polarity is positive on the barrel and negative in the center).
- 4. INPUT Jack:**  
1/4" mono audio jack, for connecting guitar.
- 5. OUTPUT Jack:**  
1/4" mono audio jack, outputs the signal.
- 6. Mode Switch:**  
Switch between HP mode and LP mode.

**7. VOLUME Knob:** Adjusts the volume of the drive sound.

**8. TONE Knob:** Adjusts the tone color of the drive sound.

**9. DRIVE Knob:** Adjusts the gain of the drive sound.

**Specification**

**Effects Modes:** 2 (HP, LP)

**Input:** 1/4" monaural jack (impedance: 470k Ohms)

**Output:** 1/4" monaural jack (impedance: 1k Ohms)

**Power Requirements:** AC adapter 9V DC (center minus plug), recommended to use Mooger Micro Power

**Current Draw:** 6 mA

**Dimensions:** 93.5mm (D) × 42mm (W) × 52mm (H)

**Weight:** 150g

**Accessories:** Owner's Manual

*\* Disclaimer: Any specification's update won't be amended in this manual.*