

ShimVerb

Digital Reverb Pedal

Owner's Manual

Precautions

PLEASE READ CAREFULLY BEFORE PROCEEDING

Power Supply

Please connect the designated AC adapter to an AC outlet of the correct voltage. Please be sure to use only an AC adapter which supplies 9V ($\pm 10\%$) DC, center minus. The maximum working voltage shall not exceed 12V, otherwise may be dangerous equipment damage, fire or other problems. Unplug the AC power adapter when not using or during electrical storms.

Connections

Always turn off the power of this and all other equipment before connecting or disconnecting, this will help prevent malfunction and / or damage to other devices. Also make sure to disconnect all connection cables and the power cord before moving this unit.

Cleaning

Clean only with a soft, dry cloth. If necessary, slightly moisten the cloth. Do not use abrasive cleanser, cleaning alcohol, paint thinners, wax, solvents, cleaning fluids, or chemical-impregnated wiping cloths.

Interference with other electrical devices

Radios and televisions placed nearby may experience reception interference. Operate this unit at a suitable distance from radios and televisions.

Location

To avoid deformation, discoloration, or other serious damage, do not expose this unit to the following conditions:

- Direct sunlight
- Heat sources
- Magnetic fields
- Extreme temperature or humidity
- Excessive dusty or dirty location
- High humidity or moisture
- Strong vibrations or shocks

FCC certification

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

Main Features

- 3 Reverb Modes: Room, Spring, Shimmer
- Full metal shell
- Very small and compact design
- True bypass switch
- DC 9V adapter power supply

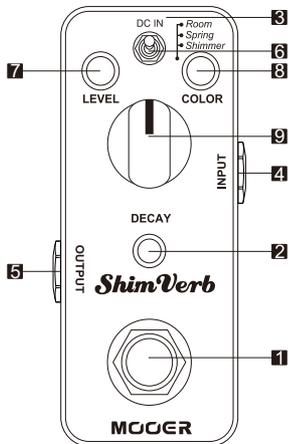
Effects Explanation

Room: Different sized true acoustics reverb, from room to hall.

Spring: Simulates a classic spring reverberation, vintage 60's Surfing sound.

Shimmer: Add rich overtone into the reverb sound, spacy, smooth and shining, very popular in Post Rock music.

Panel Instruction

- 
- TRUE BYPASS Footswitch:** Push down the footswitch to toggle between on and bypass status.
 - ON/OFF LED:** Shows the on/off status of ShimVerb, when the LED is lit the effect is engaged.
 - DC IN Power Jack:** For power supply, use a 9-volt DC regulated AC adapter (plug polarity is positive on the barrel and negative in the center).
 - INPUT Jack:** 1/4" mono audio jack, for connecting guitar.
 - OUTPUT Jack:** 1/4" mono audio jack, outputs the signal.
 - Mode Switch:** Switch between Room mode, Spring mode and Shimmer mode.
 - LEVEL Knob:** Adjusts the level of the reverb sound.
 - COLOR Knob:** Adjusts the tone of the reverb sound in Room mode; Adjusts the volume of particular spring effects in Spring mode; Adjusts the brightness of overtone in Shimmer mode.
 - DECAY Knob:** Adjusts the decay time of the reverb sound.

Specification

Reverb Modes: 3 (Room, Spring, Shimmer)

Input: 1/4" monaural jack (impedance: 470k Ohms)

Output: 1/4" monaural jack (impedance: 100 Ohms)

Power Requirements: AC adapter 9V DC (center minus plug), recommended to use Moorer Micro Power

Current Draw: 128 mA

Dimensions: 93.5mm (D) x 42mm (W) x 52mm (H)

Weight: 170g

Accessories: Owner's Manual

* Disclaimer: Any specification's update won't be amended in this manual.